



 

 
 
 
 
 


 


 




 


 



 


 
 
 
 


 










 
 

 




	Original	Replacement		Original	Replacement
	Power		Power		ShowView
	DVD		Smart		Subt
	1		1		TV/R
	2		2		I<< Skip/Index
	3		3		Skip/Index >>I
	4		4		<< Slow/Search
	5		5		Slow/Search FF
	6		6		Stop
	7		7		Pause
	8		8		Play
	9		9		Direct Navigator/Top
	0		0		Functions
	*Cancel/Reset		Exit		S/Sub Menu
	Input Select		AV		Return
	Ch+Track/VLoc		Ch +		Up
	Ch-Track/VLock-		Ch -		Down
	Audio		Dual		Right
					Left



