











Original	Replacement
DVD/VHS Power	Power
TV Power	Shift + Power
TV CH +	Shift + CH+ /
TV Volume +	Vol+
Drive Select	Picture / Format
TV AV	Shift + AV / Input / RDS
TV CH -	Shift + CH- /
TV Volume -	Vol-
1	1
2	2
3	3
CH + / Tracking/V-Lock +	CH+ / Page+
4	4
5	5
6	6
CH - / Tracking/V-Lock -	CH- / Page-
7	7

Original	Replacement
8	8
9	9
VIDEO Plus+	TV/Radio /
* / Reset	Fav / Marker / PC
0	0
Input Select	AV / Input / RDS
Delete	Exit / Cancel / Clear
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
i	Info / Angle
Prog Check	Setup / OPT /
Guide	Guide / EPG / -/-





Original	Replacement
 Direct Navigator	 D.Menu / Top
 Left / <ll	 Left
 Up	 Up
 Enter / OK	 OK
 Right / ll>	 Right
 Functions	 Menu / Home
 Sub Menu	 Smart / List
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow / Create Chapter	 Yellow / YouTube / Repeat
 Blue / Manual	 Blue / Prime Video / Random
 Rec	 Rec / Rec Mode
 Rec Mode	 Shift + Rec Mode / Rec Mode
 Ext Link	 Sound / Title
 Direct TV Rec	 Zoom / Size

Original	Replacement
 Text	 Text / Goto
 STTL	 Subtitle / EQ
 Display	 Display / Media
 Time Slip / << Jet Rew	 Shift + << /

