 

 

 











 



 



 



 

 

 

 

 

 

 

 

 

 

 



 

 



 







 





Original	Replacement	Original	Replacement
 Power	 Power	 10+	 Guide / EPG / -/--
 USB/Card	 AV / Input / RDS	 Title	 Sound / Title
 Display	 Display / Media	 Stop	 Stop / Hold
 Mute	 Mute / Dimmer	 Setup	 Setup / OPT /
 1	 1	 Zoom	 Zoom / Size
 2	 2	 Audio	 Audio / Lang I/II
 3	 3	 Subtitle	 Subtitle / EQ
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Left	 Left
 7	 7	 Right	 Right
 8	 8	 OK	 OK
 9	 9	 Vol+	 Vol+
 0	 0	 Vol-	 Vol-
 Repeat	 Green / APP / Repeat	 Play/Pause	 Play / Slow
 A-B	 Yellow / YouTube / Repeat	 << / Tune-	 << / Tune-
 Goto	 Text / Goto	 >> / Tune+	 >> / Tune+



