



 


































Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV / Radio	 TV/Radio /
 0	 0
 ←PR	 Back / Return
 EPG	 Guide / EPG / -/--
 Up / PR+	 Up
 Up / PR+	 Shift + Up

Original	Replacement
 Menu	 Menu / Home
 Left / Vol-	 Shift + Left
 Left / Vol-	 Left
 OK / List	 OK
 OK / List	 Shift + OK
 Right / Vol+	 Shift + Right
 Right / Vol+	 Right
 Info	 Info / Angle
 Down / PR-	 Shift + Down
 Down / PR-	 Down
 Exit	 Exit / Cancel / Clear
 Red / Audio	 Shift + Red / Netflix /
 Red / Audio	 Red / Netflix / Search
 Page+	 CH+ / Page+
 Yellow / Subtitle	 Shift + Yellow / YouTube /
 Yellow / Subtitle	 Yellow / YouTube / Repeat
 Page-	 CH- / Page-





Original		Replacement		Original	Replacement
	Green / TXT	 + 	Shift + Green / APP / Repeat		
	Green / TXT		Green / APP / Repeat		
	Pause		Pause / Step / Freeze		
	Blue / L/R		Blue / Prime Video / Random		
	::		Text / Goto		
	FAV		Fav / Marker / PC		
	UHF		Setup / OPT /		
	PAL / NTSC		D.Menu / Top		
	Record		Rec / Rec Mode		
	Play		Play / Slow		
	Stop		Stop / Hold		
	TV / AV		AV / Input / RDS		
	<<		<< / Tune-		
	>>		>> / Tune+		
	< Seek	 + 	Shift + << /		
	Seek >	 + 	Shift + >> /		

