



Original	Replacement
 Power	 Power
 [i]/Info	 Info
 Mute	 Mute
 I-II	 Dual
 OK/Select	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--/+10	 +  Shift + Guide
 Exit	 Exit

Original	Replacement
 Menu	 Menu
 Red/↑/Return	 Red
 Green/↓/Subtitle	 Green
 Yellow/Audio	 Yellow
 Blue/Angle	 Blue
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <<	 <<





 
 
 


Original	Replacement	Original	Replacement
	>>		>>
	[TV]		TV/R
	D-Menu		Smart
	TV		Media
	AV		AV
	P<P		Pre Ch
	PP		D. Menu
	[≡]		Text
	[≡o]		Subt
	[≡+]		Format
	[≡x]		3D
	[≡◆]/Wide		Shift + Format
	[≡?]		Options
	[≡i]/Guide		Guide
	[...]/Subtitle		Back

Original	Replacement	Original	Replacement





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--/+10		Guide
	Exit		Exit
	Red/↑/Return		Red
	Green/↓/Subtitle		Green
	Yellow/Audio		Shift + Yellow
	Blue/Angle		Blue

Original	Replacement	Original	Replacement
	Stop		Stop
	Play		Play
	Pause		Pause
	D-Menu		Smart
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Time		Shift + AV
	Zoom		Shift + Eject
	Program		Sleep
	Search Mode		AV
	Repeat		Text
	A-B		Shift + Play
	C		Yellow
	Title		Info
	Display		Shift + Info





Original	Replacement	Original	Replacement
	Open/Close		Eject
	Menu		Menu
	Select		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

