



 



 

 
 
 

 

 

 

 

 


 


 


 
 
 









 



 





 





 









 
 


 
 
 
 
 
 
 

 
 







Original	Replacement	Original	Replacement
 Power	 Power	 Internet/PIP	 Media
 HDMI/Control	 Smart	 1	 1
 Rec	 Rec	 2	 2
 Stop	 Stop	 3	 3
 Play	 Play	 4	 4
 Pause	 Pause	 5	 5
 <<<	 <<<	 6	 6
 >>>	 >>>	 7	 7
 I<<<	 I<<<	 8	 8
 >>I	 >>I	 9	 9
 Red/Zoom/↑ ↓	 Red	 0	 0
 Green/Repeat/↓	 Green	 Text	 Text
 Yellow/Root	 Yellow	 Info	 Info
 Blue/Title	 Blue	 Source	 AV
 Screen	 Format	 OK	 Ok
 Lang	 Dual	 Up	 Up
 Subtitle	 Subt	 Down	 Down





Original	Replacement	Original	Replacement
	Right		Right
	Left		Left
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Mute		Mute
	Return		Back
	Swap		Pre Ch
	FAV		Shift + Pre Ch
	EPG		Guide
	Sleep		Sleep
	Search Mode		Shift + AV
	Ball/Angle		Options
	Display		Shift + Info
	Presets		TV/R

