



 


 



 






































 




 



 



 








Original	Replacement	Original	Replacement
 RCVR On	 Power	 RCVR Test / Menu	 Menu
 RCVR Standby	 Shift + Power	 RCVR Audio	 Dual
 RCVR Sleep	 Sleep	 RCVR Level	 Media
 RCVR Return	 Back	 RCVR Level Up	 Smart
 RCVR Setup	 Options	 RCVR I<<	 I<<
 RCVR Disc+	 Ch +	 RCVR Play	 Play
 RCVR Disc-	 Ch -	 RCVR >>I	 >>I
 RCVR Up	 Up	 RCVR <<	 <<
 RCVR Left	 Left	 RCVR Stop	 Stop
 RCVR Enter	 Ok	 RCVR >>	 >>
 RCVR Right	 Right	 RCVR Rec /	 Rec
 RCVR Down	 Down	 RCVR Pause / Play Rev.	 Pause
 RCVR Vol+	 Vol +	 Open / Close	 Eject
 RCVR Vol-	 Vol -	 RCVR Input Sel.	 1
 RCVR Muting	 Mute	 RCVR Input Sel.	 2
 RCVR CH Sel / Top Menu	 Shift + Menu	 RCVR Input Sel.	 3
 RCVR CH Sel / Top Menu	 D. Menu	 RCVR Input Sel.	 4






 








 












 













 




 



 




 






 









Original	Replacement		
RCVR Input Sel.		5	
RCVR Input Sel.		6	
RCVR Input Sel.		7	
RCVR Input Sel.		8	
RCVR Input Sel.		9	
RCVR Input Sel.		0	
RCVR Stereo	+	Shift + 1	
RCVR Direct	+	Shift + 2	
RCVR DSP ►	+	Shift + 3	
RCVR SURR	+	Shift + 4	
RCVR THX	+	Shift + 5	
RCVR ◀ DSP	+	Shift + 6	
RCVR SP A	+	Shift + 7	
RCVR SP B	+	Shift + 8	
RCVR Re-EQ	+	Shift + 9	
RCVR Dimmer	+	Shift + 0	
RCVR Display		Info	

Original	Replacement		
RCVR Display		Guide	
RCVR Zone 2		Pre Ch	





Original	Replacement	Original	Replacement
 ON	 Power	 Subtitle	 Subt
 STDBY	 Shift + Power	 I<<	 I<<
 Return	 Back	 Play	 Play
 Setup	 Options	 >>I	 >>I
 Disc+	 Ch +	 <<	 <<
 Disc-	 Ch -	 Stop	 Stop
 Up	 Up	 >>	 >>
 Left	 Left	 Random	 Text
 Enter	 Ok	 Pause	 Pause
 Right	 Right	 Open / Close	 Eject
 Down	 Down	 1	 1
 Vol+	 Vol +	 2	 2
 Vol-	 Vol -	 3	 3
 Muting	 Mute	 4	 4
 Top Menu	 D. Menu	 5	 5
 Menu	 Menu	 6	 6
 Angle	 Format	 7	 7






 


 















 



 
 














 










Original		Replacement	
	8		8
	9		9
	0		0
	+10		Guide
	Search		TV/R

Original	Replacement








Original	Replacement	Original	Replacement
	ON		Power
	STDBY		Shift + Power
	Disc+		Ch +
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	I<<		I<<
	Play		Play
	>>I		>>I
	<<		<<
	Stop		Stop
	>>		>>
	Random		Text
	Pause		Pause
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide





Original	Replacement	Original	Replacement
 ON	 Power	 3	 3
 STDBY	 Shift + Power	 4	 4
 Vol+	 Vol +	 5	 5
 Vol-	 Vol -	 6	 6
 Muting	 Mute	 7	 7
 I<<	 I<<	 8	 8
 Play	 Play	 9	 9
 >>I	 >>I	 0	 0
 <<	 <<	 +10	 Guide
 Stop	 Stop	 Enter	 Pre Ch
 >>	 >>	 Enter	 Ok
 Rec / Random	 Text		
 Rec / Random	 Rec		
 Pause	 Pause		
 Open / Close	 Eject		
 1	 1		
 2	 2		

