






 






 



 


 















 
 








 



 

 

 







 

 

 




Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 Sleep / Timer	 Sleep	 Up / P+	 Up
 Sleep / Timer	 Shift + AV	 Up / P+	 Ch +
 Display	 Info	 Down / P-	 Down
 Mute	 Mute	 Down / P-	 Ch -
 1	 1	 Right / Vol+	 Right
 2	 2	 Right / Vol+	 Vol +
 3	 3	 Left / Vol-	 Left
 4	 4	 Left / Vol-	 Vol -
 5	 5	 Enter	 Ok
 6	 6	 Input Select	 AV
 7	 7	 Text / Mix	 Text
 8	 8	 Normal	 Smart
 9	 9	 Skip	 Media
 0	 0	 Audio 1/2	 Dual
 P↔P	 Back	 Status	 D. Menu
 P↔P	 Pre Ch	 Red	 Red





Original		Replacement		Original		Replacement	
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Picture Size		Eject				

