

 
 



 

 

 





 

 

 



 




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 YPbPr	 Shift + 3
 MTS	 Audio / Lang I/II
 VGA	 Shift + 2
 TV	 Shift + 1
 AV	 Shift + AV / Input / RDS
 HDMI	 Shift + 0
 EPG	 Guide / EPG / -/-
 Aspect	 Setup / OPT /
 Aspect	 Shift + Format / Picture / Format
 Menu	 Menu / Home
 Up	 Up


 
Original	Replacement
 Input	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 TV Display	 Display / Media
 Vol+	 Vol+
 S.M	 Sound / Title
 CH+	 CH+ / Page+
 Vol-	 Vol-
 P.M	 Picture / Format
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4







Original	Replacement
	Power
	Mute
	Red
	Green
	Yellow
	Blue
	YPbPr
	CC
	MTS
	VGA
	DTV strength
	TV
	AV
	HDMI
	CHList
	EPG
	FAV

Original	Replacement
	Aspect
	Menu
	Up
	Source
	Left
	Enter
	Right
	Exit
	Down
	Tv Display
	Vol+
	S.M
	CH+
	Vol-
	P.M
	CH-
	1



