
 


 
 
 
 

 
 



 
 




 




 


 




Original		Replacement		Original		Replacement	
	Power		Power		OK		Ok
	3D		3D		Option		Options
	Input Tv		TV/R		Back/Return		Back
	Input AV		Media		Red		Red
	Menu		Menu		Green		Green
	Exit		Exit		Yellow		Yellow
	[≡]/Text		Text		Blue		Blue
	[≡◆]/STTL		Subt		Vol+		Vol +
	[+]/Aspect		Format		Vol-		Vol -
	i		Info		Mute		Mute
	APPS		Sleep		PR+		Ch +
	Home		Smart		PR-		Ch -
	Guide		Guide		1		1
	Up		Up		2		2
	Down		Down		3		3
	Right		Right		4		4
	Left		Left		5		5





	Original	Replacement	Original	Replacement
	6			
	7			
	8			
	9			
	0			
	?/Help			
	Last View			
	<<			
	Play			
	>>			
	I<<			
	Pause			
	>>I			
	Stop			
	Rec	