


 


 

 


 
 



 

















 

 
 

 

 







 

 



 
 
 

 



 




 





 
 

 






Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Radio/Tv		TV/R
	Last View		Pre Ch
	CH/Page+		Ch +
	CH/Page-		Ch -
	Internet		Smart
	Guide		Guide
	i/Status		Info
	X/Exit		Exit
	Option		Options
	Return		Back
	Play/x1.3		Play
	Pause/Pause Live		Pause
	Stop		Stop
	>>		>>
	<<		<<
	<</Remind Live		<<
	>>		>>
	Rec		Rec
	Function Menu		Menu
	Direct Navigator/PopUp		List
	OK		Ok
	Up		Up
	Down		Down





Original		Replacement		Original		Replacement	
	Right/ >		Right		Power Tv		Shift + Power
	Left/<		Left		Vol+ TV		Vol +
	Red		Red		AV/Input TV		Shift + AV
	Green		Green		Vol- TV		Vol -
	Yellow		Yellow		CH+ TV		Shift + Ch +
	Blue		Blue		CH- TV		Shift + Ch -
	[≡]/Text		Text		Drive Select		Media
	[≡◆]/STTL		Subt				
	Rec Mode		Shift + Rec				
	Prog/Check		Sleep				
	Chapter		Eject				
	Audio		Dual				
	Time Slip		D. Menu				
	Input Select		AV				
	DEL		Mute				
	Manual Skip -10s		Format				
	Manual Skip +60s		3D				

