



Original	Replacement	Original	Replacement
 Power	 Power	 Option	 Options
 1	 1	 Back/Return	 Back
 2	 2	 Play/x1.3	 Play
 3	 3	 Pause	 Pause
 4	 4	 Stop	 Stop
 5	 5	 >>	 >>
 6	 6	  <<	  <<
 7	 7	 >>	 >>
 8	 8	 <<	 <<
 9	 9	 OK	 Ok
 0	 0	 Up	 Up
 Input Select	 AV	 Down	 Down
 Guide	 Guide	 Right/ >	 Right
 Exit	 Exit	 Left/<	 Left
 i/Status	 Info	 Red	 Red
 Function Menu	 Menu	 Green	 Green
 Direct Navigator/Pop-Up Menu	 List	 Yellow	 Yellow





Original	Replacement	Original	Replacement
 Blue	 Blue	 Power Tv	 Shift + Power
 Rec	 Rec	 Av Input Tv	 Shift + AV
 Cast/Vieta	 Pre Ch	 CH+ Tv	 Shift + Ch +
 S/Skipe	 Smart	 CH- Tv	 Shift + Ch -
 [=]/Text	 Text	 Vol+ Tv	 Vol +
 [=♦]/Sttl	 Subt	 Vol- Tv	 Vol -
 AD	 Shift + Subt	 DEL	 Mute
 Direct Tv Rec	 TV/R	 Drive Select	 Media
 Ext Link	 Format		
 Prog/Check	 Sleep		
 Rec Mode	 Shift + Rec		
 Chapter	 Dual		
 Time Slip	 3D		
 Manual Skip -10s	 Shift + Left		
 CH+	 Ch +		
 Manual Skip +60s	 Shift + Right		
 CH-	 Ch -		

