
 

 

 
 
 

 





 










 

 

 



 


















Original	Replacement
 Power	 Power
 Guide	 Guide / EPG / -/--
 Tv Input	 AV / Input / RDS
 AV Input	 Shift + AV / Input / RDS
 Menu	 Menu / Home
 Text	 Text / Goto
 [=◇]/STTL	 Subtitle / EQ
 [=+]/Aspect	 Picture / Format
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Netflix	 Shift + Red / Netflix /
 APPS	 Smart / List
 Left	 Left
 Up	 Up
 Right	 Right
 Home	 Shift + Menu /
 OK	 OK

Original	Replacement
 Option	 Setup / OPT /
 Down	 Down
 Back/Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+
 Vol-	 Vol-
 PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





	Original	Replacement	Original	Replacement
	6			
	7			
	8			
	9			
	?/Help			
	0			
	Last View			
	<<			
	Play			
	>>			
	I<<			
	Pause			
	>>I			
	Stop			
	Rec	