 





 
 
 
 
 
 
 
 
 

 

 

 

 

 
 

 

 



 
 


 
 

 
 
 
 
 
 




Original	Replacement	Original	Replacement
	Power		Info
	AV		Ch +
	1		Ch -
	2		Menu
	3		Exit
	4		Options
	5		Back
	6		Up
	7		Down
	8		Right
	9		Left
	0		Ok
	Still		TV/R
	Recall		Media
	Vol +		Guide
	Vol -		3D
	Mute		Shift + AV





Original	Replacement	Original	Replacement
 Text	 Text		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Audio	 Dual		
 STTL	 Subt		
 Sound	 Shift + Dual		
 <<	 <<		
 Pause	 Pause		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

