

















 



















 



 















 













Original	Replacement	Original	Replacement
 Power	 Power	 8	 8
 Power Tv	 Shift + Power	 9	 9
 Vol+ Tv	 Vol+	 Internet	 Smart / List
 CH+ Tv	 Shift + CH+ /	 Last View	 Fav / Marker / PC
 Drive Select	 Display / Media	 0	 0
 AV Input Tv	 Shift + AV / Input / RDS	 Radio/Tv	 TV/Radio /
 Vol- Tv	 Vol-	 Skipe	 Shift + Smart / List
 CH- Tv	 Shift + CH- /	 I<< Skip	 I<< / Preset-
 1	 1	 Skip >>I	 >>I / Preset+
 2	 2	 << Slow/Search/Rewi	 << / Tune-
 3	 3	 Slow/search >>	 >> / Tune+
 CH/Page+	 CH+ / Page+	 Stop	 Stop / Hold
 4	 4	 Pause/Pause Live	 Pause / Step / Freeze
 5	 5	 Play	 Play / Slow
 6	 6	 i/Status	 Info / Angle
 CH/Page-	 CH- / Page-	 X/Exit	 Exit / Cancel / Clear
 7	 7	 Guide	 Guide / EPG / -/-



