



Original	Replacement	Original	Replacement
 Power	 Power	 CH-	 CH- / Page-
 TV Power	 Shift + Power	 7	 7
 TV Vol+	 Shift + Vol+	 8	 8
 TV Vol+	 Vol+	 9	 9
 TV CH+	 Shift + CH+ /	 ShowView	 Picture / Format
 Drive Select	 Text / Goto	 */Delete	 Shift + Exit / Cancel / Clear
 TV AV	 Shift + AV / Input / RDS	 0	 0
 TV Vol-	 Shift + Vol-	 Input Select	 AV / Input / RDS
 TV Vol-	 Vol-	 Status	 Info / Angle
 TV CH-	 Shift + CH- /	 I<< Skip	 I<< / Preset-
 1	 1	 Skip >>I	 >>I / Preset+
 2	 2	 <<	 << / Tune-
 3	 3	 >>	 >> / Tune+
 CH+	 CH+ / Page+	 Stop	 Stop / Hold
 4	 4	 Pause	 Pause / Step / Freeze
 5	 5	 Play / 1.3	 Play / Slow
 6	 6	 Time Slip	 Sleep / Timer





Original	Replacement
Prog / Check	TV/Radio /
Exit	Exit / Cancel / Clear
Direct Navigator	Smart / List
Left / <	Left
Up	Up
Right /   >	Right
Function Menu	Menu / Home
OK	OK
Option	Setup / OPT /
Down	Down
Return	Back / Return
Red / Audio	Audio / Lang I/II
Red / Audio	Red / Netflix / Search
Green / Display	Display / Media
Green / Display	Green / APP / Repeat
Yellow / Create Chapter	Yellow / YouTube / Repeat
Blue/ Manual Skip	Blue / Prime Video / Random

Original	Replacement
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
Ext Link	D.Menu / Top
Direct Tv Rec	Eject / Surround

