

 

 

 

 

 

 

 

 
 






 



Original	Replacement
 Power	 Power
 Disc	 Shift + 2
 Disc	 Shift + 3
 Tuner	 Shift + 6
 TV	 Shift + 1
 AUX / DI.	 Shift + 7
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Zoom	 Zoom / Size
 Audio	 Audio / Lang I/II
 Disc Menu	 D.Menu / Top
 Setup	 Setup / OPT /
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down

Original	Replacement
 Return / Title	 Shift + Sound / Title
 Return / Title	 Back / Return
 Display	 Display / Media
 I<<	 I<< / Preset-
 I<<	 << / Tune-
 Play	 Play / Slow
 >>I	 >>I / Preset+
 >>I	 >> / Tune+
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Vol +	 Vol+
 Vol -	 Vol-
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4





	Original	Replacement	Original	Replacement
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	Program	 TV/Radio /		
	0	 0		
	Repeat	 Shift + Green / APP /		
	Surr.	 Eject / Surround		
	Surr.	 Red / Netflix / Search		
	Sound	 Sound / Title		
	Sound	 Green / APP / Repeat		
	Vocal	 Yellow / YouTube / Repeat		
	Karaoke	 Blue / Prime Video / Random		

