





 





 
 











Original	Replacement
 Power	 Power
 ambilight	 Display / Media
 Info	 Info / Angle
 Pair / Sources	 AV / Input / RDS
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Home	 Menu / Home
 Settings	 Setup / OPT /
 <<	 << / Tune-
 <<<	 I<< / Preset-
 Play	 Play / Slow
 >>	 >> / Tune+
 >>>	 >>I / Preset+

Original	Replacement
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Netflix	 Shift + Red / Netflix /
 ::	 Smart / List
 PR+	 CH+ / Page+
 TV Exit	 Exit / Cancel / Clear
 PR-	 CH- / Page-
 Rakuten TV	 Shift + 2
 1	 1



