



Original		Replacement		Original		Replacement	
	Power		Power				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Turbo		Smart / List				
	Base		Display / Media				
	Clock		TV/Radio /				
	Timer		Sleep / Timer				
	Time-		CH- / Page-				
	Time+		CH+ / Page+				
	Mode		Picture / Format				
	Up		Up				
	Left		Left				
	Enter		OK				
	Right		Right				
	Down		Down				

