









 



 




































 




 



 

















Original		Replacement		Original		Replacement	
	Standby		Power		Stop		Stop / Hold
	1		1		Play/Pause		Play / Slow
	2		2		Play/Pause		Pause / Step / Freeze
	3		3		I>/Resume		Shift + Play /
	4		4		Surround		Eject / Surround
	5		5		Sound		Sound / Title
	6		6		Night		Shift + Sleep / Timer
	7		7		Mute		Mute / Dimmer
	8		8		Repeat		Green / APP / Repeat
	9		9		Repeat A-B		Yellow / YouTube / Repeat
	0		0		Sleep		Sleep / Timer
	Vol+		Vol+		DIM		Shift + Mute / Dimmer
	Vol-		Vol-		Subw +		Up
	Left		Left		Rear +		Shift + CH+ /
	Right		Right		Center +		CH+ / Page+
	I<<		I<< / Preset-		Tv Vol+		Shift + Vol+
	>>I		>>I / Preset+		Subw -		Down















 
 



	Original		Replacement		Original		Replacement
	Rear -		Shift + CH- /				
	Center -		CH- / Page-				
	Tv Vol-		Shift + Vol-				







 



 

 

 









 

 



 





Original	Replacement
 Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Disc (DVD)	 D.Menu / Top
 0	 0
 Vol+	 Vol+
 System (DVD)	 Menu / Home
 Vol-	 Vol-
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

Original	Replacement
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 I>/Resume	 Shift + Play /





 



 

 

 













Original		Replacement		Original		Replacement	
	Standby		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Up		Up				
	Left		Left				
	OK		OK				
	Right		Right				
	Down		Down				





Original		Replacement		Original		Replacement	
	Standby		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				

