


 


 
 
 
 
 

 














 

 
 




 



 


 

 
 


 
 

 

 



 
 









Original	Replacement
 Power On/Off	 Power
 Display	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 .	 Guide
 CH Enter	 Pre Ch
 P/CH+	 Ch +
 P/CH-	 Ch -
 Muting	 Mute

Original	Replacement
 I-II MTS	 Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Integrator	 Smart
 Home	 Menu
 Exit	 Exit
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter/Set	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 PC	 Media





Original	Replacement
Input	AV
Ext Input	+ Shift + AV
TV	TV/R
Split	+ Shift + 3D
Sub Input	Subt
Swap	Sleep
(PIP) Shift	3D
Drive Off	+ Shift + Options
Factory	D. Menu
2nd Factory	Text
Set Up/Auto	Options
ID No. SET -	+ Shift + TV/R
Clear +	+ Shift + Exit
Power Control	+ Shift + Power
AV Selection	List
Power Off	+ Shift + Media
Power On	+ Shift + Smart

Original	Replacement
Zoom/Point	Eject
Zoom-	+ Shift + Ch -
Zoom+	+ Shift + Ch +
Freeze	Pause
Size/Screen	Format
Input 1	+ Shift + 1
Input 2	+ Shift + 2
Input 3	+ Shift + 3
Input 4	+ Shift + 4
Input 5	+ Shift + 5
Input 6	+ Shift + 6
Input 7	+ Shift + 7
Input 8	+ Shift + 8





Original	Replacement
Power On/Off	Power
Display	Info
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
CH Enter	Pre Ch
.	Guide
P/CH+	Ch +
P/CH-	Ch -
Muting	Mute

Original	Replacement
I-II MTS	Dual
Vol+	Vol +
Vol-	Vol -
Integrator	Smart
Home	Menu
Exit	Exit
Return	Back
Up	Up
Down	Down
Right	Right
Left	Left
Enter/Set	Ok
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
PC	Media





Original	Replacement
Input	AV
Ext Input	Shift + AV
TV	TV/R
Split	Shift + 3D
Sub Input	Subt
Swap	Sleep
(PIP) Shift	3D
Drive Off	Shift + Options
Factory	D. Menu
2nd Factory	Text
Set Up/Auto	Options
ID No.Set -	Shift + TV/R
Clear +	Shift + Exit
Control Power	Shift + Power
AV Selection	List
Power Off	Shift + Media
Power On	Shift + Smart

Original	Replacement
Zoom-	Shift + Ch -
Zoom/Point	Eject
Zoom+	Shift + Ch +
Freeze	Pause
Size/Screen	Format
Input 1	Shift + 1
Input 2	Shift + 2
Input 3	Shift + 3
Input 4	Shift + 4
Input 5	Shift + 5
Input 6	Shift + 6
Input 7	Shift + 7
Input 8	Shift + 8

