






 




 







 

 
 




 



 

 

 

 

 



 



 



 



 



 



 









 






Original		Replacement		Original		Replacement	
	Power		Power		Down		Down
	Last Memory		TV/Radio /		Right		Right
	Conditon		Zoom / Size		Left		Left
	Open/Close		Eject / Surround		OK		OK
	Audio		Audio / Lang I/II		Stop		Stop / Hold
	Subtitle		Subtitle / EQ		Play		Play / Slow
	Angle		Info / Angle		Pause		Pause / Step / Freeze
	Setup		Setup / OPT /		<I/Step		CH- / Page-
	Menu		Menu / Home		Slow I>		CH+ / Page+
	Top Menu		D.Menu / Top		<</Rev		<< / Tune-
	Repeat		Green / APP / Repeat		>>/Fwd		>> / Tune+
	Repeat A-B		Yellow / YouTube / Repeat		1		1
	Display		Display / Media		2		2
	Return		Back / Return		3		3
	I<</Prev		I<< / Preset-		4		4
	>>I/Next		>>I / Preset+		5		5
	Up		Up		6		6





	Original	Replacement	Original	Replacement
7	7	 7		
8	8	 8		
9	9	 9		
0	0	 0		
+10	+10	 Guide / EPG / -/--		
CLEAR	Clear	 Exit / Cancel / Clear		
RANDOM	Random	 Blue / Prime Video / Random		
PROGRAM	Program	 Shift + TV/Radio / Program		
SEARCH MODE	Search Mode	 Red / Netflix / Search		

