


































| Original | Replacement |
|---|---|
|  Power |  Power |
|  Disc Side A/B |  D.Menu / Top |
|  Open/Close |  Eject / Surround |
|  Audio |  Audio / Lang I/II |
|  Subtitle |  Subtitle / EQ |
|  Angle |  Info / Angle |
|  Display |  Display / Media |
|  Menu |  Menu / Home |
|  Title |  Sound / Title |
|  Up |  Up |
|  Return |  Back / Return |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Prev |  I<< / Preset- |
|  Down |  Down |
|  Next |  >>I / Preset+ |

| Original | Replacement |
|--|--|
|  Rev |  << / Tune- |
|  Pause |  Pause / Step / Freeze |
|  Play |  Play / Slow |
|  FWD |  >> / Tune+ |
|  Stop |  Stop / Hold |
|  <II Step |  CH- / Page- |
|  Step II> |  CH+ / Page+ |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Clear |  Exit / Cancel / Clear |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  +10 |  Guide / EPG / -/-- |
|  7 |  7 |
|  8 |  8 |



