



Original	Replacement
Power Receiver	Power
Input Select	AV / Input / RDS
DVD/CD	Shift + 1
SAT/TV	Shift + 2
Video1/Video2	Shift + 3
DVR1/DVR2	Shift + 4
iPod/CD-R	Shift + 5
Tuner/Multi In	Shift + 6
1/Sleep	1
2/Video Sel	2
3/Analog ATT	3
4/SR+	4
5/Dimmer	5
6/S.Retriever	6
8	8
Top Menu	D.Menu / Top
Up/Tune Up	Up

Original	Replacement
Menu/T.Edit	Menu / Home
Setup/Guide/PTY Search	Setup / OPT /
Left/←ST	Left
Enter	OK
Right/ST→	Right
Down/Tune	Down
Return/Band	Back / Return
Vol+ Tv Control	Shift + Right
Power Tv Control	Shift + Power
CH+ Tv Control	CH+ / Page+
Vol+	Vol+
Vol- Tv Control	Shift + Left
Input Select Tv Control	Shift + AV / Input / RDS
CH- Tv Control	CH- / Page-
Vol-	Vol-
Mute	Mute / Dimmer
Status	Display / Media

























































 
 


Original	Replacement	Original	Replacement
Signal Sel	TV/Radio /		
SB Ch	Green / APP / Repeat		
Stereo	Audio / Lang I/II		
THX	Text / Goto		
Standard	Subtitle / EQ		
Adv. Surr	Picture / Format		
Phase	Blue / Prime Video / Random		
MCACC	Zoom / Size		
S.Direct	Red / Netflix / Search		





Original	Replacement
 Power Source/System	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +/-10/D.Access/V. Parameter	 Guide / EPG / -/--
 0	 0
 Enter/Class/Disc/CH Level	 Fav / Marker / PC
 Up/Tune Up	 Up
 Menu/T.Edit	 Menu / Home
 Setup/PTY Search	 Setup / OPT /
 Left/←-ST	 Left

Original	Replacement
 Enter	 OK
 Right/ST→	 Right
 Down/Tune	 Down
 Return/Band	 Back / Return
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 I<</MPX/B	 I<< / Preset-
 Pause/EON/C	 Pause / Step / Freeze
 Disp/Audio	 Info / Angle
 Status	 Display / Media

