


 




 




 

 






Original	Replacement
 Power	 Power
 Tv/Radio	 TV/R
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AV	 0
 Menu	 Menu
 ?	 Info
 P+	 Ch +
 P-	 Ch -

Original	Replacement
 Vol+	 Vol +
 Vol-	 Vol -
 Red/↑/List	 Red
 Green/↓/Subtitle	 Green
 Yellow/→<	 Yellow
 Blue/FAV	 Blue
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Guide	 Guide
 Lang	 Dual
 Pause	 Pause
 P<P	 Pre Ch
 TXT	 Text

