



Original	Replacement	Original	Replacement
PWR	Power	Yellow/FAV	Yellow / YouTube / Repeat
Tv/Rad	TV/Radio /	Blue/A-Z	Blue / Prime Video / Random
Text	Text / Goto	Menu	Menu / Home
1	1	EPG	Guide / EPG / -/--
2	2	Info	Info / Angle
3	3	Up	Up
4	4	Down	Down
5	5	Right	Right
6	6	Left	Left
7	7	OK	OK
8	8	Vol+	Vol+
9	9	Vol-	Vol-
0	0	Exit	Exit / Cancel / Clear
Back	Back / Return	Page+	CH+ / Page+
Mute	Mute / Dimmer	Page-	CH- / Page-
Red/Opt	Red / Netflix / Search	Pause	Pause / Step / Freeze
Green/AV+	Green / APP / Repeat	Play	Play / Slow

Original	Replacement	Original	Replacement
Yellow/FAV	Yellow / YouTube / Repeat	Menu	Menu / Home
Blue/A-Z	Blue / Prime Video / Random	EPG	Guide / EPG / -/--
Menu	Menu / Home	Info	Info / Angle
EPG	Guide / EPG / -/--	Up	Up
Info	Info / Angle	Down	Down
Up	Up	Right	Right
Down	Down	Left	Left
Right	Right	OK	OK
Left	Left	Vol+	Vol+
OK	OK	Vol-	Vol-
Vol+	Vol+	Exit	Exit / Cancel / Clear
Vol-	Vol-	Page+	CH+ / Page+
Exit	Exit / Cancel / Clear	Page-	CH- / Page-
Page+	CH+ / Page+	Pause	Pause / Step / Freeze
Page-	CH- / Page-	Play	Play / Slow
Pause	Pause / Step / Freeze		
Play	Play / Slow		





	Original	Replacement	Original	Replacement
	<<	<< / Tune-		
	Stop	Stop / Hold		
	>>	>> / Tune+		
	Rec	Rec / Rec Mode		
	Slow	Shift + Play /		
	List	Smart / List		
	A-B	D.Menu / Top		
	Mark	Fav / Marker / PC		
	Jump	Subtitle / EQ		
	PIP	Zoom / Size		
	Swap	Setup / OPT /		
	Move	Display / Media		
	Sleep	Sleep / Timer		

