




 



 





 



 

 




 


 



 



 
 





 


 





 








 






 

 
 
 








Original	Replacement	Original	Replacement
 Standby	 Power	 6	 6
 Record	 Rec	 7	 7
 Up	 Up	 8	 8
 Left	 Left	 9	 9
 Right	 Right	 0	 0
 Down	 Down	 Vol+	 Vol +
 →>	 Smart	 Vol-	 Vol -
 OK	 Ok	 Mute	 Mute
 Menu	 Menu	 P<P	 Pre Ch
 Clear	 Exit	 P+	 Ch +
 Timer	 AV	 P-	 Ch -
 SV/V+	 Media	 Play	 Play
 1	 1	 <<	 <<
 2	 2	 >>	 >>
 3	 3	 > / Index	 >>
 4	 4	 Stop	 Stop
 5	 5	 > < Still	 Pause





	Original	Replacement	Original	Replacement
	Teletext	 Text		
	Hold	 Red		
	Reveal	 Green		
	Size	 Yellow		
	Cancel	 Blue		

