










 






 



 


 













 



















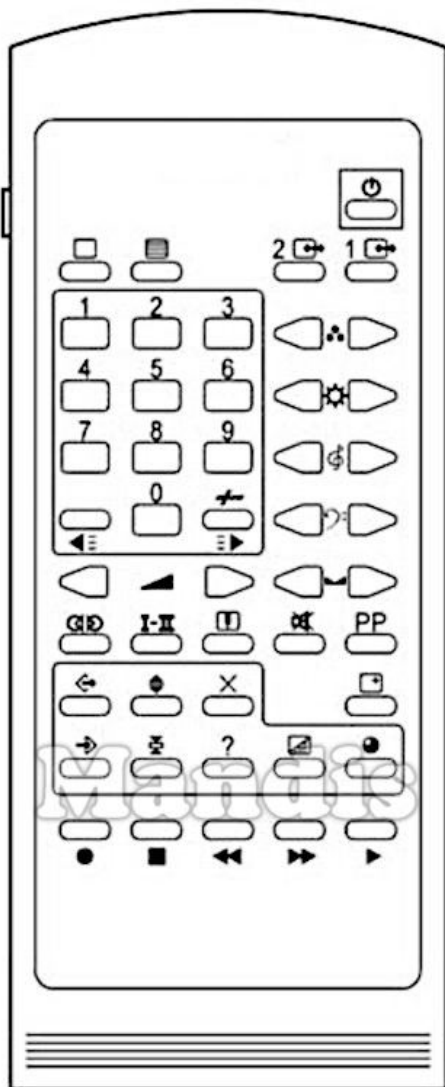 




Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 TV	 Smart / List	 Sol-	 << / Tune-
 Text	 Text / Goto	 Sol+	 >> / Tune+
 Source 2	 Shift + AV / Input / RDS	 <=	 Shift + CH- /
 Source 1	 AV / Input / RDS	 0	 0
 1	 1	 +/- / =>	 Shift + CH+ /
 2	 2	 +/- / =>	 Guide / EPG / +/-
 3	 3	 Fa-	 Left
 Contrast-	 I<< / Preset-	 Fa+	 Right
 Contrast+	 >>I / Preset+	 Vol-	 Vol-
 4	 4	 Vol+	 Vol+
 5	 5	 ><-	 CH- / Page-
 6	 6	 ><+	 CH+ / Page+
 Brightness-	 Down	 OO	 Sound / Title
 Brightness+	 Up	 I-II	 Audio / Lang I/II
 7	 7	 [   ]	 Zoom / Size
 8	 8	 Mute	 Mute / Dimmer





	Original	Replacement		Original	Replacement
	PP	 Back / Return			
	Exit	 Exit / Cancel / Clear			
	Size	 +  Shift + Zoom /			
	Cancel	 +  Shift + Exit / Cancel / Clear			
	[+]	 Info / Angle			
	Enter	 OK			
	Hold	 Stop / Hold			
	Reveal	 TV/Radio /			
	Mix	 +  Shift + Text /			
	Subcode	 Subtitle / EQ			

