


Original	Replacement
Power	Power
TV / Video	AV
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
/--	GUIDE
Quick	Pre Ch
Mute	Mute
Sleep	Sleep
Skip	Exit

Original	Replacement
Display	Info
Up / Prog +	Ch +
Up / Prog +	Up
Down / Prog -	Ch -
Down / Prog -	Down
Right / Vol +	Vol +
Right / Vol +	Right
Left / Vol -	Vol -
Left / Vol -	Left
Menu	Menu
Menu	Ok
P-STD	Shift + Format
S-STD	Dual
PC Auto ADJ	Smart
PC / TV/PC	Media
M / S	TV/R
Surround	Shift + Dual

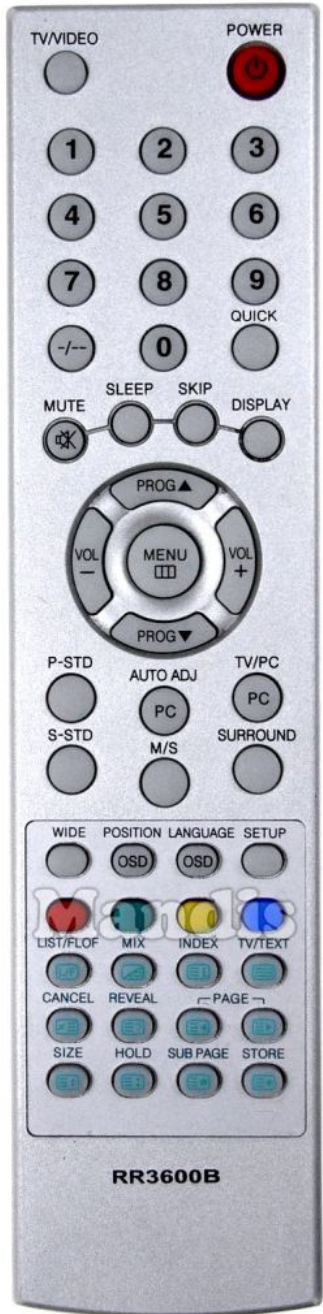



Original	Replacement	Original	Replacement
Wide	Format	Size	Eject
OSD Position	3D	Hold	Stop
OSD Language	Shift + 3D	Store	Shift + Smart
Setup	Options		
Red	Red		
Green	Green		
List / FLOF	List		
Yellow	Yellow		
Blue	Blue		
Mix	Shift + Text		
Index	Shift + Info		
TV / Text	Text		
Cancel	Back		
Subpage	Subt		
Reveal	Play		
Page -	I <<		
Page +	>> I		

Original	Replacement	Original	Replacement
Size	Eject	Size	Eject
Hold	Stop	Hold	Stop
Store	Shift + Smart	Store	Shift + Smart

