 









 


Original	Replacement
 Power	 Power
 Setup	 Options
 DTV	 D. Menu
 HDMI/AV	 AV
 1	 1
 Disk	 List
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX	 Text
 EPG	 Guide

Original	Replacement
 Movie	 Red
 Music	 Green
 Photo	 Yellow
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Exit	 Exit
 Home	 Smart
 Edit	 TV/R
 Copy	 3D
 Repeat	 Shift + Text
 Rec	 Rec
 Play	 Play





Original	Replacement	Original	Replacement
 Pause	 Pause		
 Stop	 Stop		
 <</Rev	 <<		
 >>/FF	 >>		
 >>I	 >>I		
 I<<	 I<<		
 PG Up	 Ch +		
 Pg Dn	 Ch -		
 Audio	 Dual		
 Sub-T	 Subt		
 FAV	 Pre Ch		
 Info	 Info		
 Mute	 Mute		
 DVD	 Blue		
 Timer	 +  Shift + AV		
 T/R	 Format		

Original	Replacement	Original	Replacement

