



 



 

 



 

 

 

 

 

 

 



 

















 

 




 




 

 









Original	Replacement	Original	Replacement
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/--
	0		0
	Infos		Info / Angle
	Vol +		Vol+
	Mute		Mute / Dimmer
	Prog +		CH+ / Page+
	Vol -		Vol-
	Format		Picture / Format
	Prog -		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	Media		Display / Media
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Back		Shift + Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear





	Original	Replacement	Original	Replacement
	AD	Audio / Lang I/II		
	Subtitle	Subtitle / EQ		
	Text	Text / Goto		
	Radio	TV/Radio /		
	I<<	I<< / Preset-		
	<<	<< / Tune-		
	>>	>> / Tune+		
	>>I	>>I / Preset+		
	Rec	Rec / Rec Mode		
	Stop	Stop / Hold		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		

