







 






 

 


 
 
 

 



 
 
 
 


 

 
 


 
 






 
 


 


 


 
 


 









Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol -
	Power Off		Shift + Power		CH+		Ch +
	1		1		CH-		Ch -
	2		2		Menu		Menu
	3		3		Home		Smart
	4		4		Magicinfo Player 1		Media
	5		5		Info		Info
	6		6		Tools		Options
	7		7		Exit		Exit
	8		8		Return		Back
	9		9		Enter		Ok
	0		0		Up		Up
	_/_/--/Del		Guide		Down		Down
	CH List		List		Left		Left
	Mute		Mute		Right		Right
	Source		AV		Red/PC		Red
	Vol+		Vol +		Green/DVI		Green





Original	Replacement	Original	Replacement
Yellow/HDMI	Yellow		
Blue/DP	Blue		
Set IR Control	Format		
Unset IR Control	3D		
Lock	+ Shift + Stop		
Stop	Stop		
Play	Play		
Pause	Pause		
<</ <<	<<		
>>/>>	>>		

