



| Original    | Replacement   | Original        | Replacement |
|-------------|---------------|-----------------|-------------|
| Power       | Power         | Tv Pre-CH       | Back        |
| Tv Power    | Shift + Power | Dimmer          | 0           |
| Source      | AV            | I<<             | I<<         |
| Auto Power  | Sleep         | Stop            | Stop        |
| Speaker     | Pre Ch        | Play            | Play        |
| Tv Source   | Shift + AV    | Pause           | Pause       |
| Repeat      | Text          | >>I             | >>I         |
| Any net     | Media         | Sound Effect    | Menu        |
| Soundshare  | Dual          | Smart Volume    | Smart       |
| Tv Vol+     | Shift + Vol + | 3D Sound Plus   | 3D          |
| Tv Vol-     | Shift + Vol - | DRC             | Subt        |
| Tv CH+      | Ch +          | Right S/W Level | Right       |
| Tv CH-      | Ch -          | Left S/W Level  | Left        |
| Audio Sync+ | 3             | Vol+            | Vol +       |
| Audio Sync- | 6             | Vol-            | Vol -       |
| Tv Mute     | Shift + Mute  | Mute            | Mute        |
| Tv Info     | Info          |                 |             |

