



	Original	Replacement		Original	Replacement
	Power		Power		CH.List
	Source		AV		P+
	HDMI		TV/R		P-
	1		1		Mute
	2		2		Content
	3		3		Menu
	4		4		Guide
	5		5		Tools
	6		6		Info/Clock
	7		7		Return
	8		8		Exit
	9		9		Up
	0		0		Down
	TTX/MIX		Text		Right
	PRE-CH		Pre Ch		Left
	Vol+		Vol +		Enter
	Vol-		Vol -		Red
					List
					Ch +
					Ch -
					Mute
					D. Menu
					Menu
					Guide
					Options
					Info
					Back
					Exit
					Up
					Down
					Right
					Left
					Ok
					Red





Original		Replacement		Original	Replacement
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Home		Smart		
	3D		3D		
	Dual I-II		Dual		
	Alarm		Media		
	P.Size		Format		
	Subt.		Subt		
	<<		<<		
	I<<		I<<		
	Pause		Pause		
	>>I		>>I		
	>>		>>		
	Rec		Rec		
	Play		Play		
	Stop		Stop		

