



Original	Replacement
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TTX/MIX
	0
	PRE-CH
	Vol+
	Mute
	CH+

Original	Replacement
	Vol-
	CH List
	CH-
	Netflix
	Home
	prime video
	Samsung TV
	Up
	Disney+
	Left
	Enter
	Right
	Return
	Down
	Exit
	Red
	Green





Original	Replacement
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Settings / Setup / OPT /
	Info / Angle
	Subtitle / EQ
	Stop / Hold
	<< / Tune-
	I<< / Preset-
	Play / Slow
	Pause / Step / Freeze
	>> / Tune+
	>>I / Preset+

Original	Replacement

