

















 





 

















 

 













 



















 



Original	Replacement	Original	Replacement
 On	 Power	 9	 9
 Program /	 Blue / Prime Video / Random	 0	 0
 Return	 Back / Return	 Test	 Text / Goto
 Open / Close	 Eject / Surround	 Clear	 Exit / Cancel / Clear
 Angle	 Info / Angle	 Trim	 Shift + Smart / List
 A.Replay	 Subtitle / EQ	 RDS	 AV / Input / RDS
 Zoom	 Zoom / Size	 Surround	 Shift + Eject / Surround
 1	 1	 Tune / Band	 TV/Radio /
 2	 2	 Mute	 Mute / Dimmer
 3	 3	 Bass	 Shift + Sound / Title
 4	 4	 Sound	 Sound / Title
 Audio	 Audio / Lang I/II	 Function	 Smart / List
 Sleep	 Sleep / Timer	 Volume -	 Vol-
 5	 5	 Volume +	 Vol+
 6	 6	 Setup	 Setup / OPT /
 7	 7	 Up	 Up
 8	 8	 Menu	 Menu / Home





Original	Replacement
 Left	 Left
 Enter	 OK
 Right	 Right
 Top Menu	 D.Menu / Top
 Down	 Down
 On Screen	 Display / Media
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 << / Tune/PTY -	 << / Tune-
 >> / Tune/PTY	 >> / Tune+
 I<< / Preset -	 I<< / Preset-
 >>I / Preset + / PTY CHK	 >>I / Preset+
 R.Slow	 CH- / Page-
 F.Slow	 CH+ / Page+
 S.T.CH	 Fav / Marker / PC
 S.T.ON/OFF	 Guide / EPG / -/--

Original	Replacement
 Picture Mode	 Picture / Format
 L.Memo	 Shift + Display / Media
 A-B Rep	 Yellow / YouTube / Repeat
 Repeat	 Green / APP / Repeat
 Search Mode	 Red / Netflix / Search

