



 
 

 


 





 
 



 

 



 


 







Original	Replacement
 Power	 Power
 VCR	 Smart
 DVD	 Media
 DVD Open / Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Return	 Back
 Volume-	 Vol -
 Volume+	 Vol +

Original	Replacement
 Sound	 Dual
 Setup / Menu	 Menu
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Tracking+	 Right
 Left / Tracking-	 Left
 Enter	 Ok
 Bass Boost	 Shift + Ch +
 Surround	 List
 Pause	 Pause
 Play	 Play
 Stop	 Stop
 << / Preset-	 <<
 >> / Preset+	 >>
 I<< / Tune-	 I<<





Original	Replacement	Original	Replacement
>>I / Tune+	>>I	Jump	Guide
Display	Info	Top Menu	Shift + Menu
Audio Out	Options	Audio	Shift + Dual
Input	AV	Play Mode	Shift + Play
Timer Rec	Red	A-B Repeat	Text
Zero Return	Green	Subtitle	Subt
Counter Reset	Yellow	Marker	Pre Ch
Clock / Counter	Blue	DVD Menu	D. Menu
Rec / OTR	Rec		
Tape Speed	3D		
AM/FM	Shift + TV/R		
TV/VCR	TV/R		
Clear / Cancel	Exit		
Slow	Shift + Pause		
Program	Sleep		
Angle	Format		
Zoom	Shift + Eject		

Original	Replacement	Original	Replacement
Jump	Guide	Jump	Guide
Top Menu	Shift + Menu	Top Menu	Shift + Menu
Audio	Shift + Dual	Audio	Shift + Dual
Play Mode	Shift + Play	Play Mode	Shift + Play
A-B Repeat	Text	A-B Repeat	Text
Subtitle	Subt	Subtitle	Subt
Marker	Pre Ch	Marker	Pre Ch
DVD Menu	D. Menu	DVD Menu	D. Menu

