





 

 





 









 





 


































 













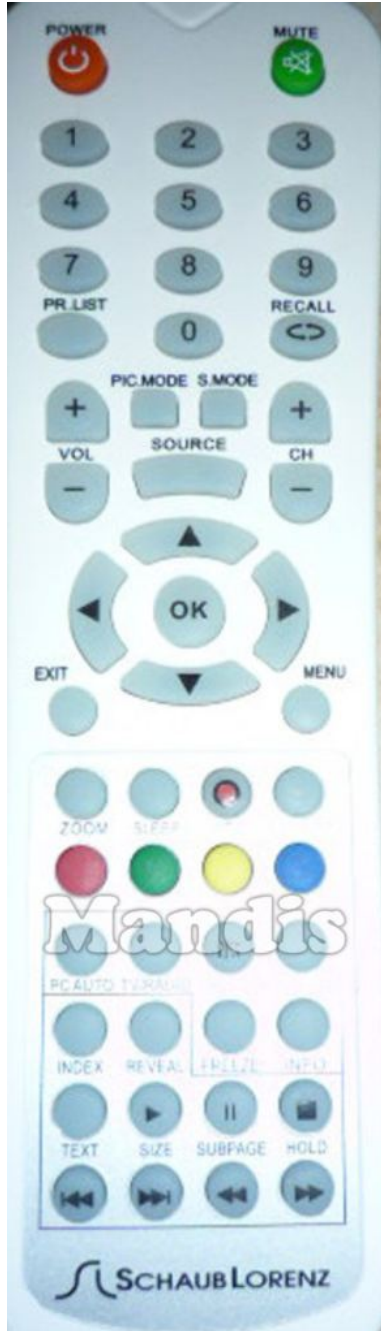








| Original   | Replacement  |
|--|--|
|  Power      |  Power              |
|  Mute       |  Mute / Dimmer      |
|  1          |  1                  |
|  2          |  2                  |
|  3          |  3                  |
|  4          |  4                  |
|  5          |  5                  |
|  6          |  6                  |
|  7          |  7                  |
|  8         |  8                 |
|  9        |  9                |
|  PR.List  |  Smart / List     |
|  0        |  0                |
|  Recall   |  Back / Return    |
|  Vol+     |  Vol+             |
|  Pic.Mode |  Picture / Format |
|  S.Mode   |  Sound / Title    |

| Original   | Replacement  |
|--|--|
|  CH+        |  CH+ / Page+              |
|  Vol-       |  Vol-                     |
|  Source     |  AV / Input / RDS         |
|  CH-        |  CH- / Page-              |
|  Up         |  Up                       |
|  Left       |  Left                     |
|  OK         |  OK                       |
|  Right      |  Right                    |
|  Exit       |  Exit / Cancel / Clear    |
|  Down      |  Down                    |
|  Menu     |  Menu / Home            |
|  Zoom     |  Zoom / Size            |
|  Sleep    |  Sleep / Timer          |
|  Rec      |  Rec / Rec Mode         |
|  Rec List |  Shift + Rec / Rec Mode |
|  Red      |  Red / Netflix / Search |
|  Green    |  Green / APP / Repeat   |





| Original  | Replacement   |
|---|---|
|    |  Yellow / YouTube / Repeat   |
|    |  Blue / Prime Video / Random |
|    |  Eject / Surround            |
|    |  TV/Radio /                  |
|    |  Audio / Lang I/II           |
|    |  Subtitle / EQ               |
|    |  Display / Media             |
|    |  Shift + Back / Return       |
|    |  Shift + Pause / Step /      |
|   |  Info / Angle               |
|  |  Text / Goto               |
|  |  Play / Slow               |
|  |  Pause / Step / Freeze     |
|  |  Stop / Hold               |
|  |  I<< / Preset-             |
|  |  >>I / Preset+             |
|  |  << / Tune-                |

| Original  | Replacement  |
|---|--|
|  |  >> / Tune+ |

