 






 





 









 

 




 

















 










Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Menu	 Menu / Home
 0	 0
 Last	 Back / Return
 Text	 Text / Goto
 Up / CH +	 Up
 Up / CH +	 CH+ / Page+

Original	Replacement
 Exit	 Exit / Cancel / Clear
 Left / Vol -	 Vol-
 Left / Vol -	 Left
 OK	 OK
 Right / Vol +	 Vol+
 Right / Vol +	 Right
 Sub-T	 Subtitle / EQ
 Down / CH -	 Down
 Down / CH -	 CH- / Page-
 Audio	 Audio / Lang I/II
 Rec	 Rec / Rec Mode
 Timer	 Sleep / Timer
 Timeshift	 Smart / List
 Info	 Info / Angle
 Red / I<<	 Red / Netflix / Search
 Red / I<<	 I<< / Preset-
 Green / <<	 << / Tune-





Original	Replacement
 Green / <<	 Green / APP / Repeat
 Yellow / >>	 >> / Tune+
 Yellow / >>	 Yellow / YouTube / Repeat
 Blue / >>	 >> / Preset+
 Blue / >>	 Blue / Prime Video / Random
 View Rec	 Shift + Rec / Rec Mode
 USB	 Shift + 8
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold

Original	Replacement

