



Original	Replacement
Standby	Power
Open / Close	Eject / Surround
Prog	TV/Radio /
Shuffle	Blue / Prime Video / Random
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
Title	Shift + Sound / Title
Display	Display / Media
Zoom	Zoom / Size
Menu	Menu / Home
Setup	Setup / OPT /
Return	Back / Return
Up	Up
Left / AM	Left
Select	OK
Right / FM	Right
Down	Down

Original	Replacement
Play/Pause	Play / Slow
Stop	Stop / Hold
I<< Skip / Tune-	I<< / Preset-
I<< Skip / Tune-	Shift + I<< / Preset-
Skip >>I / Tune+	>>I / Preset+
Skip >>I / Tune+	Shift + Skip >>I / Preset+
<< Search	<< / Tune-
Search >>	>> / Tune+
Volume+	Vol+
Speaker	D.Menu / Top
Test Tone	Text / Goto
Volume-	Vol-
Mute	Mute / Dimmer
Sound Effects	Sound / Title
Subtitle	Subtitle / EQ
Mode	Smart / List
Audio	Audio / Lang I/II





Original	Replacement
ANGLE	ANGLE INFO
Angle	Info / Angle
SEARCH MODE	NETFLIX SEARCH
Search Mode	Red / Netflix / Search
1	TV 1
1	1
2	DVD 2
2	2
3	CD - STB 3
3	3
CLEAR	CLEAR EXIT CANCEL
Clear	Exit / Cancel / Clear
4	VIDEO 4
4	4
5	TAPE 5
5	5
6	TUNER 6
6	6
+10	GUIDE EPG
+10	Guide / EPG / -/--
7	AUX - HDD 7
7	7
8	USB 8
8	8
9	BLUETOOTH 9
9	9
0	HDMI - BAT 0
0	0

Original	Replacement

