

 





 









 













 











 
 












 























 

 
 






 



 



Original	Replacement
 On/Standby	 Power
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Play Mode	 Play / Slow
 0	 0
 10+	 Guide / EPG / -/-
 iPOD Display(Tv Out)	 TV/Radio /
 iPod Menu	 Menu / Home
 iPod Play/Pause	 Pause / Step / Freeze

Original	Replacement
 CD/USB Display	 Shift + Display / Media
 CD/USB Stop	 Stop / Hold
 CD/USB	 Shift + Play /
 Bass/Treble	 Shift + Audio / Lang I/II
 Equalizer Mode	 Sound / Title
 X-Bass	 Subtitle / EQ
 Memory	 Smart / List
 Vol+	 Vol+
 Clock/Timer	 Shift + Sleep / Timer
 Clear/Dimmer	 Exit / Cancel / Clear
 Vol-	 Vol-
 Sleep	 Sleep / Timer
 Folder	 Setup / OPT /
 Up/Tuning	 Up
 Preset Up	 Shift + >>I / Preset+
 I<<	 I<< / Preset-
 Enter	 OK





Original	Replacement
 >>I	 >>I / Preset+
 Demo	 D.Menu / Top
 Down/Tuning	 Down
 Preset Down	 +  Shift + I<< / Preset-
 iPod	 Text / Goto
 Tuner(Band)	 +  Shift + 6
 CD	 +  Shift + 3
 ASPM RDS	 Picture / Format
 USB	 +  Shift + 8
 PTY RDS	 Zoom / Size
 Audio In	 Audio / Lang I/II
 Display RDS	 Display / Media

Original	Replacement

