








 


 









 
 

 






 


 



 




 



 

 


 
 
 
 









Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 P-	 CH- / Page-	 Green	 Green / APP / Repeat
 I<	 I<< / Preset-	 Yellow	 Yellow / YouTube / Repeat
 Up	 Up	 Blue	 Blue / Prime Video / Random
 P+	 CH+ / Page+	 1	 1
 >I	 >>I / Preset+	 2	 2
 Left	 Left	 3	 3
 OK	 OK	 4	 4
 Right	 Right	 5	 5
 Down	 Down	 6	 6
 Find	 Shift + Red / Netflix /	 7	 7
 Options	 Setup / OPT /	 8	 8
 Back	 Back / Return	 9	 9
 Mute	 Mute / Dimmer	 Adjust	 D.Menu / Top
 Vol+	 Vol+	 0	 0
 Exit	 Exit / Cancel / Clear	 Source	 AV / Input / RDS



