 

 

 


 
 

 

 
 


 


 
 

 
 

 

 

 
 

 





 

 
 

 








Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Input		AV / Input / RDS		P+		CH+ / Page+
	TV/DVD		TV/Radio /		[i+]		Info / Angle
	DTV/ATV		Smart / List		0		0
	EPG		Guide / EPG / -/--		Recall		Fav / Marker / PC
	[<>]		Picture / Format		P-		CH- / Page-
	Mute		Mute / Dimmer		Red/I<< Skip		Red / Netflix / Search
	1		1		Green/<< Rev		Green / APP / Repeat
	2		2		Yellow/>>FWD		Yellow / YouTube / Repeat
	3		3		Blue/>>I Skip		Blue / Prime Video / Random
	Vol+		Vol+		Pause		Pause / Step / Freeze
	4		4		Play		Play / Slow
	5		5		Stop		Stop / Hold
	6		6		Setup/Tv Menu		Setup / OPT /
	Vol-		Vol-		DVD Menu		Menu / Home
	7		7		Up		Up
	8		8		Left/<I Slow		Left





Original	Replacement
OK	OK
Right/ > Slow	Right
Return	Back / Return
Down	Down
Top Menu	D.Menu / Top
Cancel	Exit / Cancel / Clear
[...] / Audio	Subtitle / EQ
[...] / Audio	Audio / Lang I/II
Play Mode	Display / Media
[...] / Text	Text / Goto
[...] / Angle	Shift + Info / Angle
[...] / Zoom	Zoom / Size
[...] /	Sleep / Timer

Original	Replacement

