



Original		Replacement		Original		Replacement	
	Power		Power		0		0
	Mute		Mute		-/--		Guide
	Display		Shift + Info		Return		Back
	P.Mode		Shift + Format		DTV/DR		TV/R
	Title		Shift + Smart		Info		Info
	ST/MO		Dual		FAV		Pre Ch
	P.Size		Format		EPG		Shift + Guide
	Subtitle		Subt		Audio		Shift + Dual
	1		1		Tv/AV		AV
	2		2		CH+		Ch +
	3		3		CH-		Ch -
	4		4		Vol+		Vol +
	5		5		Vol-		Vol -
	6		6		Tv Setup		Smart
	7		7		DVB Menu		Menu
	8		8		DVD Setup		Media
	9		9		Eject		Eject





Original	Replacement	Original	Replacement
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Text		Text
	Hold		Options
	Index		List
	Cancel		Shift + Exit
	Reveal		D. Menu
	Mix		Sleep
	Sub Page		Shift + Subt
	Size		3D
	Red/Program		Red
	Green/Intro		Green
	Yellow/Repeat		Yellow
	Blue/A-B		Blue

Original	Replacement	Original	Replacement
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Slow/Step		Shift + Media
	Goto		Shift + Text
	Angle		Exit
	Zoom		Shift + Eject

