







| Original | Replacement | Original | Replacement |
|---|---|---|--|
|  Power |  Power |  Up / CH + |  Ch + |
|  Mute |  Mute |  Down / CH - |  Down |
|  1 |  1 |  Down / CH - |  Ch - |
|  2 |  2 |  Right / Vol + |  Right |
|  3 |  3 |  Right / Vol + |  Vol + |
|  4 |  4 |  Left / Vol - |  Left |
|  5 |  5 |  Left / Vol - |  Vol - |
|  6 |  6 |  OK |  Ok |
|  7 |  7 |  PG + |  Shift + Ch + |
|  8 |  8 |  PG - |  Shift + Ch - |
|  9 |  9 |  TV / Radio |  TV/R |
|  0 |  0 |  SUB |  Subt |
|  Info |  Info |  TTX |  Text |
|  EPG |  Guide |  Audio |  Dual |
|  Menu |  Menu |  Last |  Back |
|  Exit |  Exit |  Mode |  Smart |
|  Up / CH + |  Up |  White / Sleep |  Sleep |





| Original | | Replacement | | Original | | Replacement | |
|---|---------------|---|--------|----------|--|-------------|--|
|  | White / Sleep |  | Pre Ch | | | | |
|  | Red |  | Red | | | | |
|  | Green |  | Green | | | | |
|  | Yellow |  | Yellow | | | | |
|  | Blue |  | Blue | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

