










 













 









| Original  | Replacement  |
|---|--|
|  Power     |  Power              |
|  Mute      |  Mute / Dimmer      |
|  1         |  1                  |
|  2         |  2                  |
|  3         |  3                  |
|  4         |  4                  |
|  5         |  5                  |
|  6         |  6                  |
|  7         |  7                  |
|  8         |  8                  |
|  9        |  9                 |
|  0       |  0                |
|  DTV/ATV |  D.Menu / Top     |
|  Recall  |  Back / Return    |
|  P.Mode  |  Picture / Format |
|  S.Mode  |  Sound / Title    |
|  Sleep   |  Sleep / Timer    |

| Original   | Replacement   |
|--|---|
|  Menu       |  Menu / Home           |
|  Source     |  AV / Input / RDS      |
|  Up         |  Up                    |
|  Left       |  Left                  |
|  Enter      |  OK                    |
|  Right      |  Right                 |
|  Down       |  Down                  |
|  Exit       |  Exit / Cancel / Clear |
|  Display    |  Display / Media       |
|  Vol+       |  Vol+                  |
|  Vol-      |  Vol-                 |
|  MTS      |  Info / Angle        |
|  Rec List |  Smart / List        |
|  CH+      |  CH+ / Page+         |
|  CH-      |  CH- / Page-         |
|  FAV/List |  Fav / Marker / PC   |
|  Rec      |  Rec / Rec Mode      |







| Original  | Replacement | Original  | Replacement           |
|---|-------------|---|-----------------------|
|      | Power       |      | Power                 |
|      | Mute        |      | Mute / Dimmer         |
|      | 1           |      | 1                     |
|      | 2           |      | 2                     |
|      | 3           |      | 3                     |
|      | 4           |      | 4                     |
|      | 5           |      | 5                     |
|      | 6           |      | 6                     |
|      | 7           |      | 7                     |
|      | 8           |      | 8                     |
|    | 9           |    | 9                     |
|    | 0           |    | 0                     |
|    | DTV/ATV     |    | D.Menu / Top          |
|    | Recall      |    | Back / Return         |
|    | P.Mode      |    | Picture / Format      |
|    | S.Mode      |    | Sound / Title         |
|    | Sleep       |    | Sleep / Timer         |
|    | Menu        |    | Menu / Home           |
|    | Source      |    | AV / Input / RDS      |
|    | Up          |    | Up                    |
|    | Left        |    | Left                  |
|    | Enter       |    | OK                    |
|    | Right       |    | Right                 |
|    | Down        |    | Down                  |
|    | Exit        |    | Exit / Cancel / Clear |
|    | Display     |    | Display / Media       |
|    | Vol+        |    | Vol+                  |
|  | Vol-        |  | Vol-                  |
|  | MTS         |  | Info / Angle          |
|  | Rec List    |  | Smart / List          |
|  | CH+         |  | CH+ / Page+           |
|  | CH-         |  | CH- / Page-           |
|  | FAV/List    |  | Fav / Marker / PC     |
|  | Rec         |  | Rec / Rec Mode        |



