



Original	Replacement
	AV / Input / RDS
	Power
	Shift + OK
	Zoom / Size
	Shift + Smart / List
<</<I button icon"/>	<< / Tune-
	Play / Slow
>>/I> button icon"/>	>> / Tune+
	Shift + D.Menu / Top Menu
	I<< / Preset-
	Stop / Hold
>>I button icon"/>	>>I / Preset+
	Shift + Setup / OPT / Tools
	Picture / Format
	Shift + Menu /
	D.Menu / Top
	Shift + Display / Media

Original	Replacement
	Exit / Cancel / Clear
	Display / Media
	Smart / List
	Fav / Marker / PC
	Guide / EPG / -/-
	Right
	Info / Angle
	Up
	OK
	Left
	Back / Return
	Down
	Setup / OPT /
	Menu / Home
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat





Original	Replacement
	Blue / Prime Video / Random
	1
	2
	3
	4
	5
	6
	7
	8
	9
	[≡]/Text / Text / Goto
	0
	[...] / Subtitle / EQ
	Vol+ / Vol+
	CH+ / Page+
	Mute / Dimmer
	Audio / Lang I/II

Original	Replacement
	Vol-
	CH- / Page-





 





 

 















 



 



 







 













 



 











Original	Replacement
	Power
	<< / Tune-
	Play / Slow
	>> / Tune+
	I<< / Preset-
	Stop / Hold
	>>I / Preset+
	Top Menu / D.Menu / Top
	Menu / Home
	Right
	[i+]/Info / Info / Angle
	Up
	Left
	Return / Back / Return
	Down
	Home / Shift + Menu /
	1

Original	Replacement
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Subtitle / EQ
	CH+ / Page+
	Audio / Lang I/II
	CH- / Page-





Original	Replacement	Original	Replacement
 Power	 Power	 Home	 Shift + Menu /
 <</<	 << / Tune-	 Red	 Red / Netflix / Search
 Play	 Play / Slow	 Green	 Green / APP / Repeat
 >>/ >	 >> / Tune+	 Yellow	 Yellow / YouTube / Repeat
  <<	  << / Preset-	 Blue	 Blue / Prime Video / Random
 Stop	 Stop / Hold	 1	 1
 >>	 >>  / Preset+	 2	 2
 Top Menu	 D.Menu / Top	 3	 3
 Menu	 Menu / Home	 4	 4
 Right	 Right	 5	 5
 [i+]/Info	 Info / Angle	 6	 6
 Up	 Up	 7	 7
 OK	 OK	 8	 8
 Left	 Left	 9	 9
 Return	 Back / Return	 [≡]/Text	 Text / Goto
 Down	 Down	 0	 0
 Options	 Setup / OPT /	 [...]	 Subtitle / EQ



 



 





 





 

 



 













 




 






 
 
 

 









 



 




	Original	Replacement	Original	Replacement
AUDIO	Audio	LANG I/II AUDIO		





Original	Replacement	Original	Replacement
	Source  AV / Input / RDS		Home  Shift + Menu /
	Power 		1 
	<< / Tune- 		2 
	Play / Slow 		3 
	>> / Tune+ 		4 
	I<< / Preset- 		5 
	Stop / Hold 		6 
	>>I / Preset+ 		7 
	Top Menu  D.Menu / Top		8 
	Menu  Menu / Home		9 
	Right 		[≡]/Text  Text / Goto
	[i+]/Info  Info / Angle		0 
	Up 		[...]  Subtitle / EQ
	OK 		Vol+ 
	Left 		Mute  Mute / Dimmer
	Return  Back / Return		Audio  Audio / Lang I/II
	Down 		Vol- 