 

 

















 







 



 



 



















 



 











Original	Replacement	Original	Replacement
 Source	 AV / Input / RDS	 [≡]/Text	 Text / Goto
 Power	 Power	 Google Play	 Display / Media
 Digital/Analog	 Setup / OPT /	 Netflix	 Shift + Red / Netflix /
 Tv/Radio	 TV/Radio /	 Red	 Red / Netflix / Search
 Sync Menu	 Menu / Home	 Green	 Green / APP / Repeat
 Exit	 Exit / Cancel / Clear	 Yellow	 Yellow / YouTube / Repeat
 1	 1	 Blue	 Blue / Prime Video / Random
 2	 2	 Action Menu	 D.Menu / Top
 3	 3	 Tv	 Shift + 1
 4	 4	 Up	 Up
 5	 5	 Guide	 Guide / EPG / -/-
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Back	 Back / Return
 [i]/[?]	 Info / Angle	 Down	 Down
 0	 0	 Home	 Shift + Menu / Home



