


 



 
 
 



 



 



 




 
 


 








 




| Original | | Replacement | | Original | | Replacement | |
|---|--------------|---|---------|---|-------|---|-------|
|  | Power |  | Power |  | Play |  | Play |
|  | Input |  | AV |  | Pause |  | Pause |
|  | Dimmer |  | Smart |  | >> |  | >> |
|  | Menu |  | Menu |  | << |  | << |
|  | ↑ |  | Ch + | | | | |
|  | ↓ |  | Ch - | | | | |
|  | Back |  | Back | | | | |
|  | Enter |  | Ok | | | | |
|  | Vol+ |  | Vol + | | | | |
|  | Vol- |  | Vol - | | | | |
|  | Mute |  | Mute | | | | |
|  | SW Vol+ |  | Up | | | | |
|  | SW Vol- |  | Down | | | | |
|  | Clear Audio+ |  | Exit | | | | |
|  | Voice |  | Options | | | | |
|  | Sound Field |  | Dual | | | | |
|  | Night |  | Media | | | | |

