



Original	Replacement	Original	Replacement
I/O	Power	I>/>>/Tuning+	>>
THEATRE SYNC	Power Theatre	I<</Preset-	I<<
MENU	Menu	>>I/Preset+	>>I
TOP MENU	Top Menu	[ * ] Display	Info
RETURN	Return	<-/Replay/<II Step	Ch -
MUTING	Muting	STEP ADVANCE I >> /Advance/ >->	Ch +
VOLUME +	Volume+	CLEAR	Exit
VOLUME -	Volume-	DISC SKIP	Pre Ch
	Up	1	1
ENTER	Enter	2	2
	Down	3	3
	Right	4	4
	Left	5	5
	Play	6	6
	Pause	7	7
	Stop	8	8
TUNING - SLOW	<</<I/Tuning-	9	9



Slow



